



Working mode/set temperature/hysteresis temperature setting:

1. In the running interface, short press the SET key to enter the quick setting interface;
2. After entering the quick setting interface, short press the SET key to switch the parameters to be set (working mode/set temperature/hysteresis temperature);
3. Use the UP DOWN key to modify parameter values, supporting short press/long press;
4. Press and hold SET for more than 3S or continue for 6S without any key operation, exit the quick setting interface and save the parameters;

Alarm temperature/delay start setting/temperature correction:

1. In the running interface, press and hold SET for more than 3 seconds to enter the parameter setting interface;
2. After entering the parameter setting interface, short press the SET key to switch the parameters to be set (alarm temperature/delayed start setting/temperature correction);
3. Use the UP DOWN key to modify parameter values, supporting short press/long press;
4. Press and hold SET for more than 3S or continue for 6S without any key operation, exit the quick setting interface and save the parameters;

Alarm temperature/delay start setting/temperature correction:

1. In the running interface, press and hold SET for more than 3 seconds to enter the parameter setting interface;
2. After entering the parameter setting interface, short press the SET key to switch the parameters to be set (alarm temperature/delayed start setting/temperature correction);
3. Use the UP DOWN key to modify parameter values, supporting short press/long press;
4. Press and hold SET for more than 3S or continue for 6S without any key operation. Exit the parameter setting interface and save the parameters.



Working mode/set temperature/hysteresis temperature setting:

1. In the running interface, short press the SET key to enter the quick setting interface;
2. After entering the quick setting interface, short press the SET key to switch the parameters to be set (working mode/set temperature/hysteresis temperature);
3. Use the UP DOWN key to modify parameter values, supporting short press/long press;
4. Press and hold SET for more than 3S or continue for 6S without any key operation, exit the quick setting interface and save the parameters;

Alarm temperature/delay start setting/temperature correction:

1. In the running interface, press and hold SET for more than 3 seconds to enter the parameter setting interface;
2. After entering the parameter setting interface, short press the SET key to switch the parameters to be set (alarm temperature/delayed start setting/temperature correction);
3. Use the UP DOWN key to modify parameter values, supporting short press/long press;
4. Press and hold SET for more than 3S or continue for 6S without any key operation, exit the quick setting interface and save the parameters;

Alarm temperature/delay start setting/temperature correction:

1. In the running interface, press and hold SET for more than 3 seconds to enter the parameter setting interface;
2. After entering the parameter setting interface, short press the SET key to switch the parameters to be set (alarm temperature/delayed start setting/temperature correction);
3. Use the UP DOWN key to modify parameter values, supporting short press/long press;
4. Press and hold SET for more than 3S or continue for 6S without any key operation. Exit the parameter setting interface and save the parameters.



Working mode/set temperature/hysteresis temperature setting:

1. In the running interface, short press the SET key to enter the quick setting interface;
2. After entering the quick setting interface, short press the SET key to switch the parameters to be set (working mode/set temperature/hysteresis temperature);
3. Use the UP DOWN key to modify parameter values, supporting short press/long press;
4. Press and hold SET for more than 3S or continue for 6S without any key operation, exit the quick setting interface and save the parameters;

Alarm temperature/delay start setting/temperature correction:

1. In the running interface, press and hold SET for more than 3 seconds to enter the parameter setting interface;
2. After entering the parameter setting interface, short press the SET key to switch the parameters to be set (alarm temperature/delayed start setting/temperature correction);
3. Use the UP DOWN key to modify parameter values, supporting short press/long press;
4. Press and hold SET for more than 3S or continue for 6S without any key operation, exit the quick setting interface and save the parameters;

Alarm temperature/delay start setting/temperature correction:

1. In the running interface, press and hold SET for more than 3 seconds to enter the parameter setting interface;
2. After entering the parameter setting interface, short press the SET key to switch the parameters to be set (alarm temperature/delayed start setting/temperature correction);
3. Use the UP DOWN key to modify parameter values, supporting short press/long press;
4. Press and hold SET for more than 3S or continue for 6S without any key operation. Exit the parameter setting interface and save the parameters.



Working mode/set temperature/hysteresis temperature setting:

1. In the running interface, short press the SET key to enter the quick setting interface;
2. After entering the quick setting interface, short press the SET key to switch the parameters to be set (working mode/set temperature/hysteresis temperature);
3. Use the UP DOWN key to modify parameter values, supporting short press/long press;
4. Press and hold SET for more than 3S or continue for 6S without any key operation, exit the quick setting interface and save the parameters;

Alarm temperature/delay start setting/temperature correction:

1. In the running interface, press and hold SET for more than 3 seconds to enter the parameter setting interface;
2. After entering the parameter setting interface, short press the SET key to switch the parameters to be set (alarm temperature/delayed start setting/temperature correction);
3. Use the UP DOWN key to modify parameter values, supporting short press/long press;
4. Press and hold SET for more than 3S or continue for 6S without any key operation, exit the quick setting interface and save the parameters;

Alarm temperature/delay start setting/temperature correction:

1. In the running interface, press and hold SET for more than 3 seconds to enter the parameter setting interface;
2. After entering the parameter setting interface, short press the SET key to switch the parameters to be set (alarm temperature/delayed start setting/temperature correction);
3. Use the UP DOWN key to modify parameter values, supporting short press/long press;
4. Press and hold SET for more than 3S or continue for 6S without any key operation. Exit the parameter setting interface and save the parameters.





Working mode/set temperature/hysteresis temperature setting:

1. In the running interface, short press the SET key to enter the quick setting interface;
2. After entering the quick setting interface, short press the SET key to switch the parameters to be set (working mode/set temperature/hysteresis temperature);
3. Use the UP DOWN key to modify parameter values, supporting short press/long press;
4. Press and hold SET for more than 3S or continue for 6S without any key operation, exit the quick setting interface and save the parameters;

Alarm temperature/delay start setting/temperature correction:

1. In the running interface, press and hold SET for more than 3 seconds to enter the parameter setting interface;
2. After entering the parameter setting interface, short press the SET key to switch the parameters to be set (alarm temperature/delayed start setting/temperature correction);
3. Use the UP DOWN key to modify parameter values, supporting short press/long press;
4. Press and hold SET for more than 3S or continue for 6S without any key operation, exit the quick setting interface and save the parameters;

Alarm temperature/delay start setting/temperature correction:

1. In the running interface, press and hold SET for more than 3 seconds to enter the parameter setting interface;
2. After entering the parameter setting interface, short press the SET key to switch the parameters to be set (alarm temperature/delayed start setting/temperature correction);
3. Use the UP DOWN key to modify parameter values, supporting short press/long press;
4. Press and hold SET for more than 3S or continue for 6S without any key operation. Exit the parameter setting interface and save the parameters.